


FATIO ENCLOSURES • GAZEBOS • GARAGE DOORS INSTALLATION INSTRUCTIONS **MODEL E900, E950**


RECESS INSTALLATION


FOR SURFACE INSTALLATION, SEE PAGE 3. READ THE COMPLETE INSTALLATION INSTRUCTIONS BEFORE PROCEEDING WITH INSTALLATION. INSTALLATION MAY REQUIRE TWO PEOPLE.


INSTALLATION TOOLS

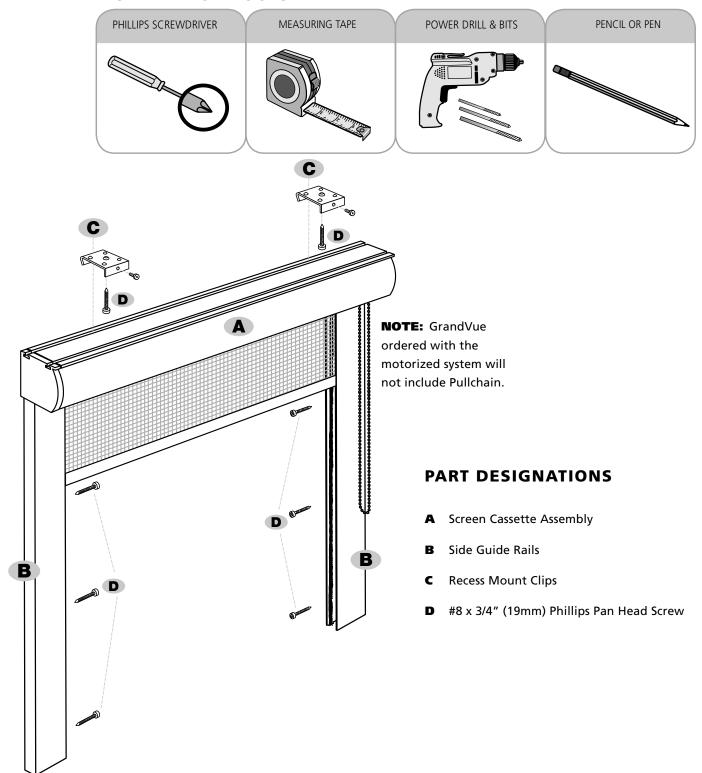

LARSON GrandVue RECESS INSTALLATION

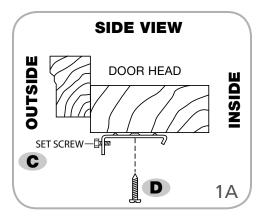


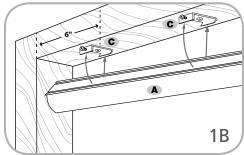


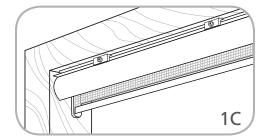

MOUNTING THE SCREEN CASSETTE

On a recess installation, the Screen Cassette Assembly will be fastened to the inside top with Recess Mount Clips. Measure how deep into the frame you wish the Cassette Assembly to be installed. Using the #8 x 3/4"(19mm) Phillips Pan Head Screws, attach the Mount Clips to the top approximately 6" in from each side. For wider openings, space any remaining clips evenly along the top. Make certain that the Set Screws are facing the front (1A). With clips screwed to the jamb securely, position the Screen Casette Assembly so that the back flanges of the Mount Clips fit into the groove at the top and back of the Cassette Assembly (1B). Then bring the front of the Casette up, so that the top of the Cassette Assembly is flat against the clips. With the Cassette Assembly positioned correctly within the opening, tighten the Mount Clip Set Screws so that the Cassette Assembly is secure and straight within the opening (1C).

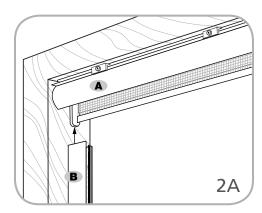


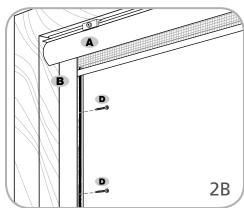

INSTALLING THE SIDE GUIDE RAILS

Slide the top end of both Side Guide Rails onto the nylon tabs that protrude from the End Caps of the Screen Cassette Assembly with the shorter pile to the inside and with the plastic end cap toward the sill (2A). (NOTE: make sure the left and right edges of the Screen and Screen Pull Bar are inside the Side Guide Rails). Attach the Side Guide Rails to the opening using #8 x 3/4"(19mm) Phillips Pan Head Screws (2B).

MOTORIZED SCREENS: If you purchased a motorized screen you will need to set the limits (the start and stop points of the screen) once the screen is installed. Please see the separate operating instructions that accompanied your remote control.







GrandVue SURFACE INSTALLATION

FOR RECESS INSTALLATION, SEE PAGE 1


INSTALLATION TOOLS

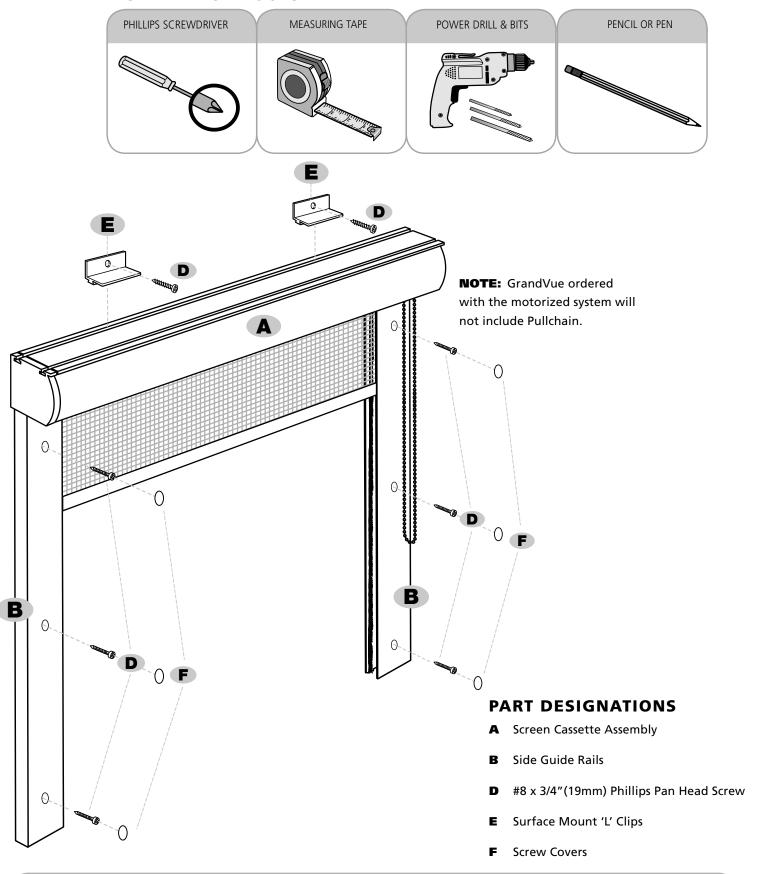

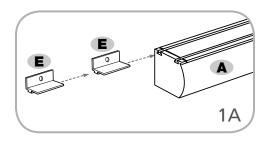



MOUNTING THE SCREEN CASSETTE

Slide the **Surface Mount 'L' Clips** into the back channel on the top of the **Screen Cassette (1A)**.

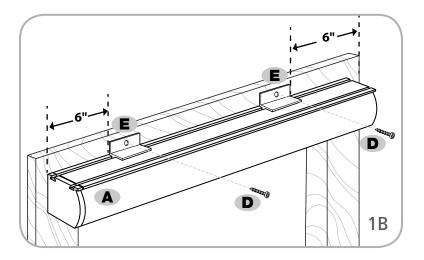

Using the #8 x 3/4"(19mm) Phillips Pan Head Screws, attach the Mount Clips approximately 6" in from each side. For wider openings, space any remaining clips evenly along the top (1B).

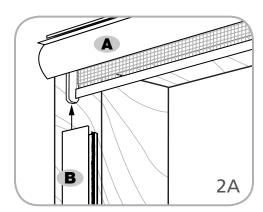

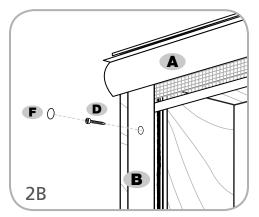

INSTALLING THE SIDE GUIDE RAILS

Slide the top of the Side Guide Rails onto the tabs protruding from the End Caps of the Screen Cassette Assembly with the shorter pile to the inside and with the plastic end cap toward the sill (2A). Use an 1/8" drill bit and first drill through both sides of the Side Guide Rails where they are to be fastened. Next, using a 3/8" bit, drill through the outside face only. This will allow you to snap the Screw Covers in place. Square and attach Side Guide Rails with #8 x 3/4"(19mm) Phillips Pan Head Screws and Screw Covers. (2B).

MOTORIZED SCREENS: If you purchased a motorized screen you will need to set the limits (the start and stop points of the screen) once the screen is installed. Please see the separate operating instructions that accompanied your remote control.

